

R1R - Random1Racing


Thank you for purchasing the R1R Shock Refill Tool.

Instructions

1. Ensure red knob on lossless chuck is loosened.
2. Thread the lossless chuck onto shock valve by turning gold knob to tighten.
3. Tighten the red knob to open the Schrader valve. If pressure is at desired value then skip to 6.
4. Apply Nitrogen using the input Schrader valve on the tool while supporting it in your hand. Either set to desired pressure or over fill and use bleed valve as described in next step (see warning).
5. Press the bleed valve to release pressure slowly until desired pressure is reached.
6. Un-thread the red knob first, then un-thread the gold knob to remove the shock fill tool.

Warning

Do not exceed 400 psi/30 BAR or the shock manufacturer's maximum working pressure. Exceeding 400 psi/30 BAR of pressure may damage the shock fill tool or shock and cause failure which may cause serious personal injury to the user.

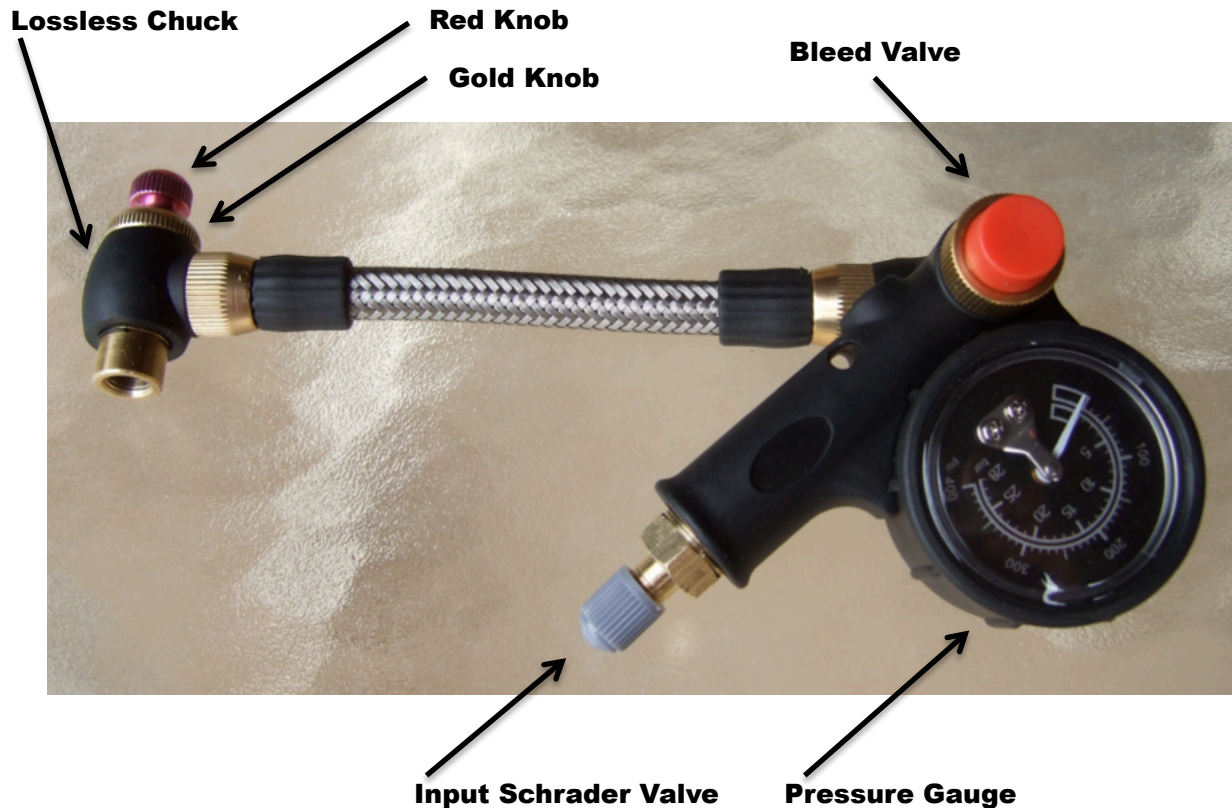

Questions? Comments on the tool? Email rob@random1racing.com
Visit us at random1racing.com